

 

 

 

 

 

 







 

 

 

 







 

 

 

 





 

 

 





 

 

 



 

 





| Original | | Replacement | | Original | | Replacement | |
|---|--------------------|---|---------------------------|---|-------------|---|-----------------------|
|  | Disc Direct Play 1 |  | Red / Netflix / Search |  | 8 |  | 8 |
|  | Disc Direct Play 2 |  | Green / APP / Repeat |  | 9 |  | 9 |
|  | Disc Direct Play 3 |  | Yellow / YouTube / Repeat |  | Clock |  | Picture / Format |
|  | 1 |  | 1 |  | 0 |  | 0 |
|  | CD Edit/Check |  | Setup / OPT / |  | Mono Tuner |  | Subtitle / EQ |
|  | PRGM |  | TV/Radio / |  | +10 |  | Guide / EPG / -/- |
|  | 2 |  | 2 |  | Band |  | Back / Return |
|  | Random/Repeat |  | Text / Goto |  | Function |  | Menu / Home |
|  | 3 |  | 3 |  | Pause |  | Pause / Step / Freeze |
|  | GEQ |  | AV / Input / RDS |  | Power |  | Power |
|  | 4 |  | 4 |  | Vol+ |  | Vol+ |
|  | 5 |  | 5 |  | Vol- |  | Vol- |
|  | T-Bass |  | Audio / Lang I/II |  | Preset |  | Fav / Marker / PC |
|  | 6 |  | 6 |  | Tuning Up |  | Up |
|  | Timer |  | Shift + Sleep / Timer |  | Play |  | Play / Slow |
|  | 7 |  | 7 |  | Tuning Down |  | Down |
|  | Sleep |  | Sleep / Timer |  | Clear |  | Exit / Cancel / Clear |





| Original | Replacement |
|----------|---------------|
| | Stop / Hold |
| | >> / Tune+ |
| | >> / Preset+ |
| | << / Preset- |
| | << / Tune- |
| | Zoom / Size |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |

| Original | Replacement |
|----------|-------------|
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |

