



Original	Replacement
Timer	+  Shift + Sleep / Timer
Sleep	Sleep / Timer
Mono Tuner	Display / Media
Clock	Setup / OPT /
CD Edit/Check	Smart / List
PRGM	TV/Radio /
Random/Repeat	+  Shift + Green / APP /
Random/Repeat	+  Shift + Blue / Prime
1	1
2	2
3	3
Tape/Deck1/2	Red / Netflix / Search
4	4
5	5
6	6
Tuner/Band	Green / APP / Repeat
7	7

Original	Replacement
8	8
9	9
Video/AUX	Yellow / YouTube / Repeat
0	0
+10	Guide / EPG / -/-
CD	Blue / Prime Video / Random
Disc Direct Play 1	+  Shift + 1
Disc Direct Play 2	+  Shift + 2
Disc Direct Play 3	+  Shift + 3
Disc Direct Play 4	+  Shift + 4
Disc Direct Play 5	+  Shift + 5
Disc Direct Play 6	+  Shift + 6
Disc Direct Play 7	+  Shift + 7
Surround	+  Shift + Eject / Surround
Manual Select	OK
Dolby Pro Logic	Sound / Title
T-Bass	Audio / Lang I/II





Original	Replacement
GEQ	Subtitle / EQ
Karaoke	Info / Angle
Open/Close	Eject / Surround
Rec/Rec Mute	Rec / Rec Mode
Play / Up /	Play / Slow
Play / Up /	Shift + >> / Preset+
Play / Up /	Up
Vol+	Vol+
Pause / Set	Pause / Step / Freeze
<< / I<< / Left / Tuning Down	Left
<< / I<< / Left / Tuning Down	<< / Tune-
<< / I<< / Left / Tuning Down	I<< / Preset-
<< / I<< / Left / Tuning Down	Shift + << /
>> / >>I / Right / Tuning Up	Right
>> / >>I / Right / Tuning Up	>> / Tune+
>> / >>I / Right / Tuning Up	>>I / Preset+
>> / >>I / Right / Tuning Up	Shift + >> /

Tune+

Original	Replacement
Vol-	Vol-
Power	Power
Stop / Down / Clear / Preset-	Down
Stop / Down / Clear / Preset-	Stop / Hold
Stop / Down / Clear / Preset-	Shift + I<< / Preset-
Stop / Down / Clear / Preset-	Exit / Cancel / Clear

