






 


 















 






 












Original	Replacement	Original	Replacement
	Power		Power
	Sleep		Sleep / Timer
	Screen		Picture / Format
	Presets		Setup / OPT /
	↔		TV/Radio /
	FAV		Shift + Fav / Marker / PC
	Lang		Audio / Lang I/II
	Subtitle		Subtitle / EQ
	TXT		Text / Goto
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	EPG		Guide / EPG / -/-
	0		0
	Swap		Fav / Marker / PC
	Photo/Music/Movi		D.Menu / Top
	World		Smart / List
	Source		AV / Input / RDS
	Menu		Menu / Home
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	C		Exit / Cancel / Clear
	Disp.		Display / Media
	Search Mode		Shift + Red / Netflix /
	Return		Back / Return





	Original	Replacement	Original	Replacement
	CH+	 CH+ / Page+	 Yellow/Root	 Yellow / YouTube / Repeat
	Info	 Info / Angle	 Blue/Title	 Blue / Prime Video / Random
	Vol+	 Vol+		
	CH-	 CH- / Page-		
	Mute	 Mute / Dimmer		
	Vol-	 Vol-		
	Rec	 Rec / Rec Mode		
	Pause	 Pause / Step / Freeze		
	I<<	 I<< / Preset-		
	>>I	 >>I / Preset+		
	<<	 << / Tune-		
	Play	 Play / Slow		
	Stop	 Stop / Hold		
	>>	 >> / Tune+		
	Red/↑/Zoom	 Red / Netflix / Search		
	Red/↑/Zoom	 Zoom / Size		
	Green/↓/Repeat	 Green / APP / Repeat		

