








 



 
 
 

 

 



 

 

 

 



 







 









 

 


 


 

 










Original	Replacement	Original	Replacement
	Power		Power
	P.Mode		Shift + Format
	S.Mode		Shift + Dual
	I / II		Smart
	I / II		Dual
	Sleep		Sleep
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	CH. List		List
	Recall		Pre Ch
	Source		AV
	Menu		Menu
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Info		Info
	Exit		Exit
	Vol +		Vol +
	Vol -		Vol -
	Mute		Mute
	Aspect		Format
	CH +		Ch +
	CH -		Ch -
	Play / Pause / EPG		Play





Original	Replacement
Play / Pause / EPG	Guide
Play / Pause / EPG	Pause
Stop / Fav	Stop
Stop / Fav	Shift + Pre Ch
Add / Del	Eject
Media	Media
I<< / TTX	I<<
I<< / TTX	Text
<< / Cancel	<<
<< / Cancel	Back
Size	3D
Subtitle	Subt
>>I / Hold	>>I
>> / Reveal	>>
Subpage	TV/R
Index	Options
Red	Red

Original	Replacement
Green	Green
Yellow	Yellow
Blue	Blue

