





























 







Original	Replacement
 Power	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 -/--	 Shift + Guide / EPG / -/--
 0	 0
 Recall	 Back / Return
 P.Mode	 Picture / Format
 S.Mode	 Sound / Title
 Nicam	 Setup / OPT /

Original	Replacement
 Sleep	 Sleep / Timer
 Source	 AV / Input / RDS
 CH+	 CH+ / Page+
 Vol+	 Vol+
 Info	 Info / Angle
 CH-	 CH- / Page-
 Vol-	 Vol-
 Media	 Display / Media
 Freeze	 Shift + Pause / Step /
 Aspect	 Shift + Picture / Format
 EPG	 Guide / EPG / -/--
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Menu	 Menu / Home
 Down	 Down





Original		Replacement		Original		Replacement	
	Exit		Exit / Cancel / Clear		Green		Green / APP / Repeat
	Text		Text / Goto		Yellow		Yellow / YouTube / Repeat
	Play		Play / Slow		Blue		Blue / Prime Video / Random
	Pause		Pause / Step / Freeze				
	Stop/Hold		Stop / Hold				
	<<		<< / Tune-				
	Size		Zoom / Size				
	>>/Reveal		>> / Tune+				
	I<</Index		I<< / Preset-				
	>>I/Subpage		>>I / Preset+				
	Lang		Audio / Lang I/II				
	Subtitle		Subtitle / EQ				
	Rec		Rec / Rec Mode				
	R.List		Smart / List				
	TV/Radio		TV/Radio /				
	Timeshift		D.Menu / Top				
	Red		Red / Netflix / Search				

