
 
 

 









 

 




 

 



 










Original	Replacement
 Power	 Power
 Eject	 Eject
 Tv/Radio	 TV/R
 Red/Goto	 Red
 Green/Angle	 Green
 Yellow/Repeat	 Yellow
 Blue/A-B	 Blue
 FAV	 Pre Ch
 Text	 Text
 Freeze/Hold	 List
 Guide	 Shift + Guide
 D.Menu	 D. Menu
 Subtitle	 Subt
 Zoom/Size	 Format
 Aspect	 3D
 Subpage	 Smart
 Media	 Media

Original	Replacement
 Play	 Play
 Pause	 Pause
 <<	 <<
 >>	 >>
 D.Setup	 Options
 Rec	 Rec
 Stop	 Stop
 I<<	 I<<
 >>I/Index	 >>I
 Menu	 Menu
 Lang/Audio	 Dual
 Sleep	 Sleep
 Title/Exit	 Exit
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left





Original	Replacement
	Ok
	Vol +
	Vol -
	Mute
	Ch +
	Ch -
	Info
	1
	2
	3
	4
	5
	6
	7
	8
	9
	0

Original	Replacement
	Guide
	Back
	AV
	Shift + Format
	Shift + Dual

