













 
 
 






 

 












 
 












 
 







 

 




 







Original	Replacement	Original	Replacement
 Power	 Power	 S.Mode	 Shift + Dual
 Mute	 Mute	 Source	 AV
 1	 1	 CH+	 Ch +
 2	 2	 CH-	 Ch -
 3	 3	 Exit	 Exit
 4	 4	 Menu	 Menu
 5	 5	 Up	 Up
 6	 6	 Down	 Down
 7	 7	 Right	 Right
 8	 8	 Left	 Left
 9	 9	 OK	 Ok
 0	 0	 Rec	 Rec
 CH.List	 List	 Timeshift	 Options
 Recall	 Pre Ch	 Timer	 Shift + AV
 Vol+	 Vol +	 Rec.List	 Media
 Vol-	 Vol -	 Red	 Red
 PIC.Mode	 Shift + Format	 Green	 Green





Original		Replacement		Original		Replacement	
	Yellow		Yellow		>>		>>
	Blue		Blue				
	Aspect		Format				
	Tv/Radio		TV/R				
	Sleep		Sleep				
	Subtitle		Subt				
	Index		Smart				
	Audio		Dual				
	Reveal		3D				
	Display		Info				
	Text		Text				
	Play/Size		Play				
	Pause/Subpage		Pause				
	Stop/Hold		Stop				
	I<<		I<<				
	>>I		>>I				
	<<		<<				

