
















 
 
 









 
 




Original	Replacement	Original	Replacement
Power	 Power		
Mute	 Mute / Dimmer		
1	 1		
2	 2		
3	 3		
4	 4		
5	 5		
6	 6		
7	 7		
8	 8		
9	 9		
0	 0		
Text	 Text / Goto		
Recall / S.Page	 Back / Return		
Index / PVR List	 Smart / List		
Reveal / Rec	 Rec / Rec Mode		
Zoom / T.Shift	 Zoom / Size		

Original	Replacement	Original	Replacement
Hold / Auto	 Shift + Stop /		
Hold / Auto	 D.Menu / Top		
Red	 Red / Netflix / Search		
Green	 Green / APP / Repeat		
Yellow	 Yellow / YouTube / Repeat		
Blue	 Blue / Prime Video / Random		
Vol +	 Vol+		
Vol -	 Vol-		
I - II	 Audio / Lang I/II		
Source	 AV / Input / RDS		
CH +	 CH+ / Page+		
Freeze	 Shift + Pause / Step /		
CH -	 CH- / Page-		
Sleep	 Sleep / Timer		
Menu	 Menu / Home		
Exit	 Exit / Cancel / Clear		
DTV / Radio	 TV/Radio /		





 






















 










Original	Replacement	
Aspect	SHIFT + FORMAT PICTURE	Shift + Picture / Format
Up	▲	Up
Left	◀	Left
OK	OK	OK
Right	▶	Right
Down	▼	Down
P.Mode	FORMAT PICTURE	Picture / Format
S.Mode	TITLE SOUND	Sound / Title
Media	MEDIA DISPLAY	Display / Media
Info	ANGLE INFO	Info / Angle
Subtitle	EQ SUBTITLE	Subtitle / EQ
Play / Pause	SLOW ▶	Play / Slow
I<<	PRESET- ◀◀	I<< / Preset-
Play / Pause	STEP-FREEZE	Pause / Step / Freeze
>>I	PRESET+ ▶▶	>>I / Preset+
Stop	HOLD ◻	Stop / Hold
<<	TUNE- ◀◀	<< / Tune-

Original	Replacement	
>>	TUNE+ ▶▶	>> / Tune+
Slow / FAV	PC FAV MARKER	Fav / Marker / PC
A-B / Fav -	SHIFT + YouTube REPEAT A-B	Shift + Yellow / YouTube /
Repeat / Fav +	SHIFT + APP REPEAT	Shift + Green / APP /
Repeat / Fav +	SHIFT + ▲	Shift + Up
A-B / Fav -	SHIFT + ▼	Shift + Down





Original	Replacement	Original	Replacement
Power		Power	
Freeze		Pause / Step / Freeze	
Swap		Back / Return	
PIP		Eject / Surround	
I-II		Audio / Lang I/II	
FAV.CH		Fav / Marker / PC	
[≡]		Text / Goto	
Mute		Mute / Dimmer	
Sleep		Sleep / Timer	
P.Size		Zoom / Size	
1		1	
2		2	
3		3	
4		4	
5		5	
6		6	
7		7	

Original	Replacement	Original	Replacement
8		8	
9		9	
0		0	
Vol+		Vol+	
Jump		Setup / OPT /	
ENT		Smart / List	
Vol-		Vol-	
Info		Info / Angle	
Source		AV / Input / RDS	
CH+		CH+ / Page+	
Ch-		CH- / Page-	
Exit		Exit / Cancel / Clear	
Menu		Menu / Home	
Up		Up	
Left		Left	
OK		OK	
Right		Right	





Original	Replacement	Original	Replacement
Down	 Down		
S.Mode	 Sound / Title		
P.Mode	 Picture / Format		
Red	 Red / Netflix / Search		
Green	 Green / APP / Repeat		
Yellow	 Yellow / YouTube / Repeat		
Blue	 Blue / Prime Video / Random		
[≡i]	 Display / Media		
[≡?]	 Play / Slow		
[≡↓]	 D.Menu / Top		
[≡□]	 Stop / Hold		

