













 







 











 







 







 



 



 



 
 










Original	Replacement	Original	Replacement
	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Lang		Audio / Lang I/II
	0		0
	Recall		Back / Return
	Vol+		Vol+
	*/Setting		Setup / OPT /
	P+		CH+ / Page+
	Vol-		Vol-
	HDMI		Shift + 0
	P-		CH- / Page-
	Media		Shift + Display / Media
	P.Mode		Picture / Format
	Home		Shift + Menu /
	S.Mode		Sound / Title
	Menu		Menu / Home
	Up		Up
	Source		AV / Input / RDS
	Left		Left
	Enter		OK
	Right		Right
	Display		Display / Media
	Down		Down
	Exit		Exit / Cancel / Clear
	Red		Red / Netflix / Search





Original	Replacement	Original	Replacement
 Green	 Green / APP / Repeat		
 Sub.T	 Subtitle / EQ		
 Yellow	 Yellow / YouTube / Repeat		
 Blue/Mouse	 Blue / Prime Video / Random		
 Play	 Play / Slow		
 Pause	 Pause / Step / Freeze		
 Stop	 Stop / Hold		
 <<	 << / Tune-		
 >>	 >> / Tune+		
 <<	 << / Preset-		
 >>	 >> / Preset+		
 Rec	 Rec / Rec Mode		

