





 



 





 



 



 



 



 



 





 
 

 
 
 
 












 







Original	Replacement	Original	Replacement
 Power	 Power	 Memory	 Rec
 Open/Close	 Eject	 CH+	 Ch +
 1	 1	 CH-	 Ch -
 2	 2	 >>I	 >>I
 3	 3	 I<<	 I<<
 4	 4	 >>	 >>
 5	 5	 Play	 Play
 6	 6	 Pause	 Pause
 7	 7	 Stop	 Stop
 8	 8	 Repeat	 Text
 9	 9	 A-B	 D. Menu
 0/10	 0	 Source	 AV
 10+	 Guide	 CD/USB	 Media
 Goto	 Pre Ch	 Treble+	 Up
 FF+	 Blue	 Treble-	 Down
 FF-	 Yellow	 Bass+	 Right
 Prog	 Sleep		



