
 




| Original | Replacement |
|---|---|
|  |  Power |
|  |  Fav / Marker / PC |
|  |  Mute / Dimmer |
|  |  1 |
|  |  2 |
|  |  3 |
|  |  4 |
|  |  5 |
|  |  6 |
|  |  7 |
|  |  8 |
|  |  9 |
|  |  Back / Return |
|  |  0 |
|  |  Display / Media |
|  |  I<< / Preset- |
|  |  >>I / Preset+ |

| Original | Replacement |
|---|---|
|  |  Play / Slow |
|  |  Stop / Hold |
|  |  Pause / Step / Freeze |
|  |  Up |
|  |  Left |
|  |  OK |
|  |  Right |
|  |  D.Menu / Top |
|  |  Down |
|  |  Menu / Home |
|  |  Subtitle / EQ |
|  |  Info / Angle |
|  |  Zoom / Size |
|  |  Green / APP / Repeat |
|  |  Yellow / YouTube / Repeat |
|  |  Audio / Lang I/II |

