



Original	Replacement	Original	Replacement
	Power		Red / Menu
	Power		Red
	Shift + Menu		Red / Menu
	Shift + Menu		Red / Menu
	Source		Green / Menu
	Source		Green
	I - II		Green / Menu
	I - II		Green / Menu
	Subtitles		Yellow / Other
	Subtitles		Yellow / Other
	[i+]		Yellow / Other
	[i+]		Yellow / Other
	[?]		Blue / OK
	[?]		Blue / OK
	Mix		Blue / OK
	Mix		Blue / OK
	Zoom		Special Audio
	Zoom		Special Audio
	Time		Text
	Time		Text
	[PP]		P -
	[PP]		P -
	DNR		P +
	DNR		P +
	Mosaic		Vol -
	Mosaic		Vol -
	Up		Vol +
	Up		Vol +
	Down		1
	Down		1
	Right		2
	Right		2
	Left		3
	Left		3


















 







 

 



 




	Original	Replacement	Original	Replacement
	4			
	5			
	6			
	7			
	8			
	9			
	0			
	Mute			
	P < P			
	Format			
	Freeze			
	Smart Controls Picture			
	Smart Controls Audio			





Original	Replacement
 Power	 Power
 Time	 TV/R
 Zoom	 3D
 Mix	 Text
 [?]	 Shift + Info
 [i+]	 Info
 Freeze/Rec	 Pause
 Format/Stop	 Format
 Source	 AV
 I-II	 Dual
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Rec	 Rec
 <<	 <<
 >>	 >>

Original	Replacement
 Stop	 Stop
 Play	 Play
 Timer	 Shift + AV
 P-	 Ch -
 P+	 Ch +
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 -/--	 Guide

