







 

 





 











 





























Original	Replacement
 Power	 Power
 DTV/VCR	 AV / Input / RDS
 Mute	 Mute / Dimmer
 Info	 Info / Angle
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 Menu	 Menu / Home
 EPG	 Guide / EPG / -/--
 Exit	 Exit / Cancel / Clear
 Up	 Up
 CH+	 CH+ / Page+
 Left	 Left
 Vol-	 Vol-
 OK	 OK
 Right	 Right
 Vol+	 Vol+
 Rec List	 Smart / List

Original	Replacement
 CH-	 CH- / Page-
 Down	 Down
 Favorite	 Fav / Marker / PC
 1	 1
 2	 2
 3	 3
 Game	 Display / Media
 4	 4
 5	 5
 6	 6
 Recall	 Back / Return
 7	 7
 8	 8
 9	 9
 0	 0
 Tv/Radio	 TV/Radio /
 Audio	 Audio / Lang I/II





Original	Replacement	Original	Replacement
SUBTITLE	EQ Subtitle / EQ		
TEXT	GOTO Text / Goto		
	NETFLIX Red / Netflix / Search		
	APP Green / APP / Repeat		
	YouTube Yellow / YouTube / Repeat		
	Prime Video Blue / Prime Video / Random		
RECORD	REC MODE Rec / Rec Mode		
STOP	HOLD Stop / Hold		
REV	TUNE- << / Tune-		
FWD	TUNE+ >> / Tune+		

Original	Replacement

