
 





 


 
 





Original		Replacement		Original		Replacement	
	POWER		Power		GUIDE		Guide
	MENU		Menu		UP		Up
	LAST		Pre Ch		OK		Ok
	MUTE		Mute		DOWN		Down
	TEXT		Text		LEFT		Left
	MODE		TV/R		RIGHT		Right
	1		1		VOL+		Vol +
	2		2		VOL-		Vol -
	3		3		PR-		Ch -
	6		6		PR+		Ch +
	5		5		SWAP		Shift + Green
	4		4		ZOOM		Eject
	7		7		RED / MOSAIC		Red
	8		8		BACK		Back
	9		9		GREEN / SLEEP		Green
	FAV		Shift + Pre Ch		YELLOW /		Yellow
	0		0		BLUE / LIST		Blue





Original		Replacement		Original	Replacement
	PAGE DOWN		Shift + Ch -		
	PAGE UP		Shift + Ch +		
	TIME SHIFT		Smart		
	STOP		Stop		
	REC		Rec		
	REW		<<		
	PLAY / PAUSE		Play		
	FWD		>>		
	PLAY / PAUSE		Pause		
	OPTION		Options		
	PIP		Shift + Red		
	TIMER		AV		
	MEDIA		Media		
	PAUSE		Shift + Yellow		
	V. FORMAT		Format		
	INFO		Info		

