



Original		Replacement		Original		Replacement	
	Power		Power		Menu		Menu / Home
	Mute		Mute / Dimmer		Exit		Exit / Cancel / Clear
	Nicam/A2		Shift + Audio / Lang I/II		1		1
	Sleep		Sleep / Timer		2		2
	Aspect		Shift + Picture / Format		3		3
	Media		Shift + Display / Media		4		4
	Display		Display / Media		5		5
	Auto		Smart / List		6		6
	P.Mode		Picture / Format		7		7
	S.Mode		Sound / Title		8		8
	DTV		D.Menu / Top		9		9
	Source		AV / Input / RDS		0		0
	Up		Up		-/--		Shift + Guide / EPG / -/--
	Left		Left		Recall		Back / Return
	Enter		OK		CH+		CH+ / Page+
	Right		Right		Info		Info / Angle
	Down		Down		Audio		Audio / Lang I/II





Original	Replacement
Vol+	Vol+
CH-	CH- / Page-
FAV	Fav / Marker / PC
Tv/Radio	TV/Radio /
Vol-	Vol-
Text	Text / Goto
EPG	Guide / EPG / -/--
Subtitle	Subtitle / EQ
Index	Setup / OPT /
<</Hold	<< / Tune-
<</Hold	+ Shift + Stop /
Size	Zoom / Size
>>	>> / Tune+
I<</Reveal	I<< / Preset-
>>I/Subpage	>>I / Preset+
Play	Play / Slow
Pause	Pause / Step / Freeze

Original	Replacement
Stop	Stop / Hold
Rec/Repeat	Rec / Rec Mode
Rec/Repeat	+ Shift + Green / APP /
T-Shift	Eject / Surround
Red	Red / Netflix / Search
Green	Green / APP / Repeat
Yellow	Yellow / YouTube / Repeat
Cyan	Blue / Prime Video / Random

