
 
 

 
 

 

 


 




 



 

 

 

 

 



 



 

 



 

 

 













 

 

 

| Original | Replacement |
|--|--|
|  CBL-SAT |  Shift + 0 |
|  DB-DVD |  Shift + 2 |
|  Game |  Smart / List |
|  TV |  TV/Radio / |
|  V |  Picture / Format |
|  AUX |  Shift + 7 |
|  Tv Input |  AV / Input / RDS |
|  Power Audio |  Power |
|  Power Source |  Shift + Power |
|  ↑ |  Shift + Up |
|  Menu |  Menu / Home |
|  Up |  Up |
|  Guide |  Guide / EPG / -/-- |
|  Left |  Left |
|  OK/Enter |  OK |
|  Right |  Right |
|  Info |  Info / Angle |

| Original | Replacement |
|---|---|
|  Down |  Down |
|  Exit |  Exit / Cancel / Clear |
|  ↓ |  Shift + Down |
|  Vol+ |  Vol+ |
|  (+) |  Shift + CH+ / |
|  DVR |  D.Menu / Top |
|  CH+ |  CH+ / Page+ |
|  Vol- |  Vol- |
|  System |  Display / Media |
|  CH- |  CH- / Page- |
|  Mute |  Mute / Dimmer |
|  Back |  Back / Return |
|  << |  << / Tune- |
|  Play |  Play / Slow |
|  >> |  >> / Tune+ |
|  I< |  I<< / Preset- |
|  Pause |  Pause / Step / Freeze |





| Original | Replacement |
|--|--|
|  > |  >> / Preset+ |
|  Rec |  Rec / Rec Mode |
|  Stop |  Stop / Hold |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |
|  7 |  7 |
|  8 |  8 |
|  9 |  9 |
|  -- |  Shift + Guide / EPG / -- |
|  0 |  0 |
|  OK/Enter |  Shift + OK |
|  CC |  Subtitle / EQ |
|  [↔] |  Shift + Display / Media |

| Original | Replacement |
|--|---|
|  ≡ |  Text / Goto |
|  Red |  Red / Netflix / Search |
|  Green |  Green / APP / Repeat |
|  Yellow |  Yellow / YouTube / Repeat |
|  Blue |  Blue / Prime Video / Random |

