


 

 







 




 


 













Original	Replacement
	Power
	Shift + Mute / Dimmer
	Mute / Dimmer
	Smart / List
	Shift + 2
	Shift + TV/Radio / Program
	Shift + 7
	TV/Radio /
	Eject / Surround
	Shift + 4
	Shift + Display / Media
	Up
	D.Menu / Top
	Setup / OPT /
	Left
	OK
	Right

Original	Replacement
	Guide / EPG / -/--
	Text / Goto
	Down
	Exit / Cancel / Clear
	CH+ / Page+
	Vol+
	CH- / Page-
	Vol-
	Stop / Hold
	Pause / Step / Freeze
	Play / Slow
	I<< / Preset-
	>>I / Preset+
	Blue / Prime Video / Random
	Green / APP / Repeat
	1
	2





	Original	Replacement	Original	Replacement
	3	 3		
	4	 4		
	5	 5		
	6	 6		
	7	 7		
	8	 8		
	9	 9		
	Info	 Info / Angle		
	0	 0		
	Previous	 Back / Return		
	uMusic	 Shift + Smart / List		
	Rating-	 Shift + Down		
	Rating+	 Shift + Up		
	Encore	 Menu / Home		
	CD #	 Fav / Marker / PC		
	Playlist	 Display / Media		
	Whole CD	 Shift + 3		

