 










 



 

 



 







 



 




 










 

 







 























Original	Replacement	Original	Replacement
 Power	 Power	 PR-	 Ch -
 Mute	 Mute	 Up	 Up
 1	 1	 Down	 Down
 2	 2	 Right	 Right
 3	 3	 Left	 Left
 4	 4	 OK/List	 Ok
 5	 5	 Vol+	 Vol +
 6	 6	 Vol-	 Vol -
 7	 7	 Info	 Info
 8	 8	 Exit	 Exit
 9	 9	 ↑	 >>
 0	 0	 ↓	 <<
 Tv/Radio	 TV/R	 Pause	 Pause
 ←PR	 Back	 Red	 Red
 EPG	 Guide	 Green	 Green
 Menu	 Menu	 Yellow	 Yellow
 PR+	 Ch +	 Blue	 Blue





Original		Replacement		Original		Replacement	
	Audio		Dual				
	TXT		Text				
	[...]		Subt				
	Audio L/R		Options				
	[+]		3D				
	FAV		Pre Ch				
	UHF		Smart				
	PAL/NTSC		Format				
	Tv/AV		AV				

