






 
 
 





 
 



 
 

 



 





 






 


 




 
 



 


















Original	Replacement	Original	Replacement
 Power	 Power	 Source	 AV
 Mute	 Mute	 Subtitle	 Subt
 TV / Radio	 TV/R	 Return	 Back
 P-Mode	 Format	 Fav	 Pre Ch
 S-Mode	 Dual	 Smart Hub	 Smart
 1	 1	 Up	 Up
 2	 2	 Left	 Left
 3	 3	 OK	 Ok
 4	 4	 Right	 Right
 5	 5	 Down	 Down
 6	 6	 Exit	 Exit
 7	 7	 EPG	 Guide
 8	 8	 Vol+	 Vol +
 9	 9	 Vol-	 Vol -
 0	 0	 Info	 Info
 Menu	 Menu	 CH. List	 3D
 Index	 Media	 CH+	 Ch +





Original	Replacement	Original	Replacement
 CH-	 Ch -		
 Play / Pause	 Play		
 Play / Pause	 Pause		
 <<<	 <<<		
 >>>	 >>>		
 Rec	 Rec		
 Stop	 Stop		
 I<<<	 I<<<		
 >>>I	 >>>I		
 Red	 Red		
 Green	 Green		
 Yellow	 Yellow		
 Blue	 Blue		

