
















 

 
 












Original	Replacement
 Power	 Power
 Zoom	 Zoom / Size
 Open/Close	 Eject / Surround
 Mute	 Mute / Dimmer
 Preview/Intro	 Back / Return
 Dolby	 Audio / Lang / I/II
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 ALT/Title/PBC	 Sound / Title
 0/10	 0

Original	Replacement
 10+	 Shift + Guide / EPG / -/--
 Menu/Setup	 Menu / Home
 Exit/Return	 Exit / Cancel / Clear
 Sub./Subtitle	 Subtitle / EQ
 Up	 Up
 CH+	 CH+ / Page+
 Right	 Right
 Left	 Left
 Enter	 OK
 Play	 Play / Slow
 CH-	 CH- / Page-
 Down	 Down
 Blue/Text/Menu	 Blue / Prime Video / Random
 Green/Audio	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Pause	 Pause / Step / Freeze
 Red/Language	 Red / Netflix / Search





Original	Replacement
 List/Angle	 Smart / List
 Info/Display	 Info / Angle
 DVD/DVB/Functio	 Display / Media
 Vol+	 Vol+
 Tv/Radio	 TV/Radio /
 Game	 Picture / Format
 Vol-	 Vol-
 Favor.	 Fav / Marker / PC
 Auto Scan	 AV / Input / RDS
 Stop	 Stop / Hold
 Slow	 Shift + Play /
 EPG/Program	 Guide / EPG / -/--
 I<<	 I<< / Preset-
 >>I	 >>I / Preset+
 Clear	 Shift + Exit / Cancel / Clear
 <<	 << / Tune-
 >>	 >> / Tune+

Original	Replacement
 Memory	 D.Menu / Top
 Repeat	 Shift + Green / APP /
 A-B	 Shift + Yellow / YouTube /
 A-Time	 Setup / OPT /

