



| Original | Replacement |
|--|--|
|  Power |  Power |
|  Eject |  Eject |
|  Mute |  Mute |
|  OSD / Info |  Info |
|  V-Mode |  Format |
|  P/N |  Shift + TV/R |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |
|  7 |  7 |
|  8 |  8 |
|  9 |  9 |
|  0 |  0 |
|  10+ |  Shift + Guide |

| Original | Replacement |
|--|---|
|  Goto |  List |
|  Setup |  Options |
|  EPG |  Guide |
|  Exit |  Exit |
|  Menu |  Menu |
|  Text / Title |  Text |
|  Subtitle |  Subt |
|  Up / CH+ |  Up |
|  Up / CH+ |  Ch + |
|  Down / CH- |  Down |
|  Down / CH- |  Ch - |
|  Right / Vol+ |  Right |
|  Right / Vol+ |  Vol + |
|  Left / Vol- |  Left |
|  Left / Vol- |  Vol - |
|  Enter |  Ok |
|  Red / Prog |  Red |





| Original | Replacement |
|-----------------|-----------------|
| Red / Prog | Sleep |
| Green / Step | Green |
| Yellow / Repeat | Yellow |
| Yellow / Repeat | + Shift + Text |
| Blue / A-B | Blue |
| Recall | Back |
| Play / Pause | Play |
| Play / Pause | Pause |
| Stop | Stop |
| << | << |
| >> | >> |
| << | << |
| >> | >> |
| Angle | 3D |
| Source | AV |
| TV / Radio | TV/R |
| FAV / PBC | Pre Ch |

| Original | Replacement |
|----------|------------------|
| Zoom | + Shift + Eject |
| Slow | + Shift + Play |
| Vocal | Media |
| Audio | Dual |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |

