 



















 

 
 










 




 









 























Original	Replacement	Original	Replacement
 Power	 Power	 Vol+	 Vol+
 Mute	 Mute / Dimmer	 Vol-	 Vol-
 1	 1	 CH+	 CH+ / Page+
 2	 2	 CH-	 CH- / Page-
 3	 3	 Menu	 Menu / Home
 4	 4	 Exit	 Exit / Cancel / Clear
 5	 5	 Back	 Back / Return
 6	 6	 FAV	 Fav / Marker / PC
 7	 7	 Up	 Up
 8	 8	 Down	 Down
 9	 9	 Left	 Left
 0	 0	 Right	 Right
 Tv Guide	 Guide / EPG / -/--	 OK	 OK
 Recall	 Shift + Back / Return	 Info	 Info / Angle
 Picture	 Picture / Format	 Text	 Text / Goto
 Sound	 Sound / Title	 Subtitle	 Subtitle / EQ
 Source	 AV / Input / RDS	 TV	 TV/Radio /

Original	Replacement	Original	Replacement
 Power	 Power	 Vol+	 Vol+
 Mute	 Mute / Dimmer	 Vol-	 Vol-
 1	 1	 CH+	 CH+ / Page+
 2	 2	 CH-	 CH- / Page-
 3	 3	 Menu	 Menu / Home
 4	 4	 Exit	 Exit / Cancel / Clear
 5	 5	 Back	 Back / Return
 6	 6	 FAV	 Fav / Marker / PC
 7	 7	 Up	 Up
 8	 8	 Down	 Down
 9	 9	 Left	 Left
 0	 0	 Right	 Right
 Tv Guide	 Guide / EPG / -/--	 OK	 OK
 Recall	 Shift + Back / Return	 Info	 Info / Angle
 Picture	 Picture / Format	 Text	 Text / Goto
 Sound	 Sound / Title	 Subtitle	 Subtitle / EQ
 Source	 AV / Input / RDS	 TV	 TV/Radio /





Original	Replacement
 YouTube	 Shift + Yellow / YouTube / Repeat
 Netflix	 Shift + Red / Netflix / Search
 Smart	 Smart / List
 Rec/DVD Menu	 Rec / Rec Mode
 I<<	 I<< / Preset-
 >>I	 >>I / Preset+
 Stop	 Stop / Hold
 Rec List/DVD	 Setup / OPT /
 <<	 << / Tune-
 >>	 >> / Tune+
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 Red/Goto	 Red / Netflix / Search
 Green/A-B	 Green / APP / Repeat
 Yellow/Angle	 Yellow / YouTube / Repeat
 Blue/Repeat	 Blue / Prime Video / Random

Original	Replacement

