


 


 
 

 
 
 
 

 



 


 

 
 



 



 



 



 

 
 


 
 
 

 
 
 
 
 



 
 


 
 
 
 
 
 




Original	Replacement	Original	Replacement
 Power	 Power	 Return	 Back
 TV/AV	 AV	 Up	 Up
 1	 1	 Down	 Down
 2	 2	 Right	 Right
 3	 3	 Left	 Left
 4	 4	 OK	 Ok
 5	 5	 CH+	 Ch +
 6	 6	 CH-	 Ch -
 7	 7	 Vol+	 Vol +
 8	 8	 Vol-	 Vol -
 9	 9	 TV-Menu	 Menu
 0	 0	 Exit	 Exit
 /--	 GUIDE	 Info	 Info
 Eject	 Eject	 Subtitle	 Subt
 Play/Pause	 Play	 Lan/Pict	 Options
 Stop	 Stop	 Zoom/Sound	 Format
 Mute	 Mute	 Sub/Nicam/A2	 D. Menu



