



Original	Replacement	Original	Replacement
 Power	 Power	 V-	 Vol-
 Source	 AV / Input / RDS	 World/Internet	 Smart / List
 1	 1	 P-	 CH- / Page-
 2	 2	 Menu	 Menu / Home
 3	 3	 Q.Menu	 D.Menu / Top
 4	 4	 Up	 Up
 5	 5	 Left	 Left
 6	 6	 OK	 OK
 7	 7	 Right	 Right
 8	 8	 Down	 Down
 9	 9	 Back	 Back / Return
 TV	 TV/Radio /	 Exit	 Exit / Cancel / Clear
 0	 0	 i	 Info / Angle
 Recall	 Fav / Marker / PC	 Music/Camera	 Display / Media
 V+	 Vol+	 TV Guide	 Guide / EPG / -/-
 Mute	 Mute / Dimmer	 */O	 Shift + 1
 P+	 CH+ / Page+	 */Q	 Shift + 2





	Original	Replacement	Original	Replacement
	[≡]/Text	Text / Goto		
	Red	Red / Netflix / Search		
	Green	Green / APP / Repeat		
	Yellow	Yellow / YouTube / Repeat		
	Blue	Blue / Prime Video / Random		
	Lang	Audio / Lang I/II		
	[≡]..	Sound / Title		
	[-O-]	Setup / OPT /		
	<<<	<<< / Tune-		
	Pause	Pause / Step / Freeze		
	>>>	>>> / Tune+		
	Rec	Rec / Rec Mode		
	Play	Play / Slow		
	Stop	Stop / Hold		

