 


 




 







 







 















































Original	Replacement	Original	Replacement
 Power	 Power	 ---/	 Shift + Guide / EPG / ---/
 Mute	 Mute / Dimmer	 Jump	 Smart / List
 Source	 AV / Input / RDS	 Menu	 Menu / Home
 P.Mode	 Picture / Format	 Info	 Info / Angle
 S.Mode	 Sound / Title	 Sleep	 Sleep / Timer
 I/II/Audio	 Audio / Lang I/II	 Exit	 Exit / Cancel / Clear
 P.Size	 Zoom / Size	 Up	 Up
 1	 1	 Left	 Left
 2	 2	 Enter	 OK
 3	 3	 Right	 Right
 4	 4	 Down	 Down
 5	 5	 Vol+	 Vol+
 6	 6	 Vol-	 Vol-
 7	 7	 P-	 CH- / Page-
 8	 8	 P+	 CH+ / Page+
 9	 9	 Red/D.Setup	 Red / Netflix / Search
 0	 0	 Red/D.Setup	 Setup / OPT /





Original	Replacement
REPEAT Green/Repeat	Green / APP / Repeat
ZOOM Yellow/Zoom	Yellow / YouTube / Repeat
ZOOM Yellow/Zoom	Shift + Zoom /
GOTO Blue/Goto	Blue / Prime Video / Random
GOTO Blue/Goto	Shift + Text /
FAV.CH [≡i]/FAV.CH	Fav / Marker / PC
FREEZE [≡?]/Freeze	Shift + Pause / Step /
USB/SD [≡♦]/USB/SD	Shift + 8
TV/RADIO [≡+]/Tv/Radio	TV/Radio /
REC Rec	Rec / Rec Mode
Stop	Stop / Hold
Open/Close	Eject / Surround
Play	Play / Slow
Pause	Pause / Step / Freeze
<<	<< / Tune-
>>	>> / Tune+
I<<	I<< / Preset-

Original	Replacement
>>I	>>I / Preset+
DVD Menu	D.Menu / Top
Text	Text / Goto
Subtitle	Subtitle / EQ
Guide	Guide / EPG / -/-

