



 


 














 

 
 


 

 





 

Original	Replacement
SOURCE	RDS AV INPUT AV / Input / RDS
	Power
1	TV 1 1
2	DVD 2 2
3	CD - STB 3 3
4	VIDEO 4 4
5	TAPE 5 5
6	TUNER 6 6
7	AUX - HDD 7 7
8	USB 8 8
9	BLUETOOTH 9 9
EPG	GUIDE EPG Guide / EPG / -/--
0	HDMI - SAT 0 0
PRE-CH	RETURN BACK Back / Return
	SHIFT + HDMI - SAT 0 Shift + 0
YPbPr	OPT-TOOLS SETUP Setup / OPT /
Video	SHIFT + VIDEO 4 Shift + 4

Original	Replacement
PC	SHIFT + PC FAV MARKER Shift + Fav / Marker / PC
Vol CH+	CH PAGE CH+ / Page+
	DIMMER MUTE Mute / Dimmer
	VOL + Vol+
	VOL - Vol-
	SIZE ZOOM Zoom / Size
	CH PAGE - CH- / Page-
	LANG I/II AUDIO Audio / Lang I/II
	TITLE SOUND Sound / Title
	FORMAT PICTURE Picture / Format
	TIMER SLEEP Sleep / Timer
	Up
	Left
	OK
	Right
	HOME MENU Menu / Home
	CLEAR EXIT CANCEL Exit / Cancel / Clear





Original	Replacement
 Down	 Down
 Info	 Info / Angle
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Teletext	 Text / Goto
 Mix	 Shift + Text /
 Size	 Shift + Zoom /
 Subpage	 >> / Tune+
 Index	 Play / Slow
 Subtitle	 Subtitle / EQ
 Hold	 Stop / Hold
 Reveal	 << / Tune-
 FAV	 Fav / Marker / PC
 CH-List	 Smart / List
 AD	 Shift + Audio / Lang I/II

Original	Replacement
 Freeze	 Pause / Step / Freeze

