


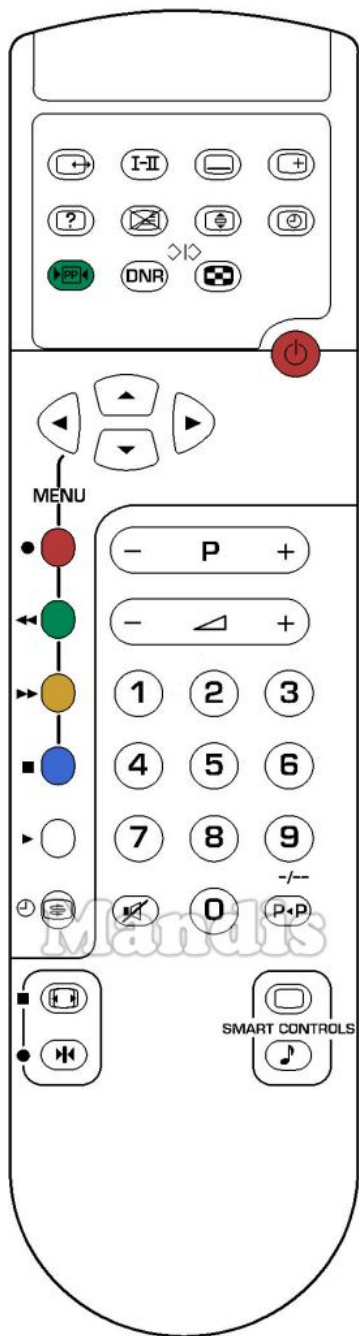

Original	Replacement	Original	Replacement
	Power		Red / Menu
	Power		Red / Menu
	Shift + Menu		Red / Menu
	Source		Red / Menu
	I - II		Green / Menu
	Subtitles		Green / Menu
	[i+]		Yellow / Other
	[?]		Yellow / Other
	Mix		Blue / OK
	Zoom		Blue / OK
	Time		Special Audio
	[PP]		Text
	DNR		P -
	Mosaic		P +
	Up		Vol -
	Down		Vol +
	Right		1
	Left		2
			3






 









 

 





 





 



 


	Original	Replacement	Original	Replacement
	4			
	5			
	6			
	7			
	8			
	9			
	0			
	Mute			
	P < P			
	Format			
	Freeze			
	Smart Controls Picture			
	Smart Controls Audio			





Original	Replacement	Original	Replacement
	Power		Power
	Time		TV/R
	Zoom		3D
	Mix		Text
	[?]		Shift + Info
	[i+]		Info
	Freeze/Rec		Pause
	Format/Stop		Format
	Source		AV
	I-II		Dual
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Rec		Rec
	<<		<<
	>>		>>

Original	Replacement	Original	Replacement
	Stop		Stop
	Play		Play
	Timer		Shift + AV
	P-		Ch -
	P+		Ch +
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/-		Guide

