

 

 



 

 



 

 

 

 

 



 

 





















 
























Original	Replacement	Original	Replacement
	Power		Power
	Audio		Audio / Lang I/II
	Mute		Mute / Dimmer
	Tv/R		TV/Radio /
	Sub-T		Subtitle / EQ
	EPG		Guide / EPG / -/--
	Text		Text / Goto
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Favor		Fav / Marker / PC
	0		0
	Last		Back / Return
	Menu		Menu / Home
	Exit		Exit / Cancel / Clear
	Up		Up
	CH+		CH+ / Page+
	Vol-		Vol-
	Left		Left
	OK		OK
	Right		Right
	Vol+		Vol+
	Info		Info / Angle
	CH-		CH- / Page-
	Down		Down
	Mode		Smart / List
	PVR		Display / Media
	USB		Shift + 8





Original	Replacement
	 Play / Slow
	 Pause / Step / Freeze
	 Red / Netflix / Search
	 I<< / Preset-
	 Yellow / YouTube / Repeat
	 >>I / Preset+
	 Stop / Hold
	 Green / APP / Repeat
	 << / Tune-
	 >> / Tune+
	 Blue / Prime Video / Random
	 Rec / Rec Mode

Original	Replacement

