










































































Original		Replacement		Original		Replacement	
	Standby		Power		I<<		I<< / Preset-
	Eject		Eject / Surround		>>		>> / Tune+
	1		1		Play		Play / Slow
	2		2		>>I		>>I / Preset+
	3		3		Up		Up
	4		4		Left		Left
	5		5		Enter		OK
	6		6		Right		Right
	7		7		Down		Down
	8		8		Return		Back / Return
	9		9		Menu		Menu / Home
	Goto		Text / Goto		Setup		Setup / OPT /
	Rec		Rec / Rec Mode		Title		Sound / Title
	0		0		Add/Clear		Fav / Marker / PC
	<<		<< / Tune-		Angle		Info / Angle
	Pause		Pause / Step / Freeze		P/N		Guide / EPG / -/-
	Stop		Stop / Hold		Audio		Audio / Lang I/II





Original	Replacement
 Slow	 +  Shift + Play /
 Zoom	 Zoom / Size
 Repeat	 Green / APP / Repeat
 Subtitle	 Subtitle / EQ
 I/P	 Exit / Cancel / Clear
 Mute	 Mute / Dimmer
 Source	 AV / Input / RDS
 Timer	 Sleep / Timer
 Disc/OP	 Smart / List
 Navigat	 D.Menu / Top
 USB	 +  Shift + 8
 TV	 TV/Radio /
 CH+	 CH+ / Page+
 Vol+	 Vol+
 Prog	 +  Shift + TV/Radio / Program
 Edit	 Display / Media
 CH-	 CH- / Page-

Original	Replacement
 Vol-	 Vol-

