








 











 
 

 


 


 












Original	Replacement	Original	Replacement
 Power	 Power	 Vol-	 Vol-
 Mute	 Mute / Dimmer	 Input	 AV / Input / RDS
 1	 1	 PR-	 CH- / Page-
 2	 2	 Up	 Up
 3	 3	 Left	 Left
 4	 4	 Enter	 OK
 5	 5	 Right	 Right
 6	 6	 Menu	 Menu / Home
 7	 7	 Down	 Down
 8	 8	 Exit	 Exit / Cancel / Clear
 9	 9	 Favourite	 Fav / Marker / PC
 Sleep	 Sleep / Timer	 FAV-	 Shift + CH- /
 0	 0	 FAV+	 Shift + CH+ /
 Recall	 Back / Return	 Info	 Info / Angle
 Vol+	 Vol+	 P-Mode	 Picture / Format
 I/II	 Audio / Lang I/II	 S-Mode	 Sound / Title
 PR+	 CH+ / Page+	 ARC	 Display / Media






































 



	Original	Replacement	Original	Replacement
	EPG	 Guide / EPG / -/--		
	Text	 Text / Goto		
	Mix	 +  Shift + Text /		
	Size	 Zoom / Size		
	Reveal	 D.Menu / Top		
	Hold	 Stop / Hold		
	Index	 Smart / List		
	S.Page	 Eject / Surround		
	S.TITL	 Subtitle / EQ		
	Red	 Red / Netflix / Search		
	Green	 Green / APP / Repeat		
	Yellow	 Yellow / YouTube / Repeat		
	Blue	 Blue / Prime Video / Random		






















Original	Replacement	
Update	 + 	Shift + D.Menu / Top Menu
Aft/Caf	 + 	Shift + AV / Input / RDS
Reveal		Setup / OPT /
Off/Tim		Eject / Surround
Game Coo		Smart / List
2.Fav P/C 2.		Fav / Marker / PC
Chan.Down		CH- / Page-
1		1
2		2
3		3
4		4
5		5
6		6
7		7
8		8
9		9
Guide -/-- 1.		Guide / EPG / -/--

Original	Replacement	
0/10		0
Menu audio		Audio / Lang I/II
Red		Red / Netflix / Search
Green		Green / APP / Repeat
Yellow		Yellow / YouTube / Repeat
Blue		Blue / Prime Video / Random
Color+ P.Std		Picture / Format
Color- S.Std		Sound / Title
Audio+	 + 	Shift + Vol+
Tune-		<< / Tune-
Tune+		>> / Tune+
Menu		Menu / Home
Mute		Mute / Dimmer
Info		Info / Angle
Subt.List		Subtitle / EQ
Txt Stop		Stop / Hold
Sleep Timer		Sleep / Timer





Original	Replacement	
Return TV	 PROGRAM TV/RADIO	TV/Radio /
Menu video	 TOP MENU D.MENU	D.Menu / Top
Text	 GOTO TEXT	Text / Goto
Txt Expand	 SIZE ZOOM	Zoom / Size
TV/AV	 RDS AV INPUT	AV / Input / RDS
On/Off		Power
Menu Up		Up
Display	 MEDIA DISPLAY	Display / Media
Menu Left		Left
OK Enter		OK
Menu Right		Right
Menu Off	 CLEAR EXIT CANCEL	Exit / Cancel / Clear
Menu Down		Down
Back	 RETURN BACK	Back / Return
Volume+		Vol+
Chan.Up		CH+ / Page+
Volume-		Vol-

Original	Replacement

