



Original	Replacement	Original	Replacement
	Power		Power
	Mute		Mute / Dimmer
	DTV		Shift + 1
	DTV		TV/Radio /
	Radio		Shift + TV/Radio / Program
	Radio		Shift + 6
	USB		Shift + 8
	DVD		Shift + 2
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Tv Guide		Guide / EPG / -/--
	0		0
	Recall		Back / Return
	Vol+		Vol+
	P.Mode		Picture / Format
	CH+		CH+ / Page+
	S.Mode		Sound / Title
	Vol-		Vol-
	FAV		Fav / Marker / PC
	CH-		CH- / Page-
	Menu		Menu / Home
	Up		Up
	Exit		Exit / Cancel / Clear
	Left		Left
	OK		OK
	Right		Right
	Source		AV / Input / RDS





Original	Replacement	Original	Replacement
 Down	 Down	 Rec List/DVD	 Setup / OPT /
 Info	 Info / Angle	 Rec List/DVD	 Smart / List
 Aspect	 Shift + Picture / Format	 << PVR/DVD	 << / Tune-
 Sleep	 Sleep / Timer	 >> PVR/DVD	 >> / Tune+
 Audio	 Audio / Lang I/II	 Pause	 Pause / Step / Freeze
 Subtitle	 Subtitle / EQ	 Play	 Play / Slow
 Text	 Text / Goto	 Red/Goto	 Shift + Text /
 Text Hold	 Shift + Stop /	 Red/Goto	 Red / Netflix / Search
 Zoom/Text/DVD	 Zoom / Size	 Green/A-B	 Green / APP / Repeat
 Power/Display	 Display / Media	 Green/A-B	 Shift + Yellow / YouTube /
 Power/Display	 Shift + Power	 Yellow/Angle/3D	 Yellow / YouTube / Repeat
 DVD Menu	 D.Menu / Top	 Yellow/Angle/3D	 Shift + Info / Angle
 Rec	 Rec / Rec Mode	 Blue/Repeat	 Blue / Prime Video / Random
 I<<	 I<< / Preset-	 Blue/Repeat	 Shift + Green / APP /
 >>I	 >>I / Preset+		
 Stop/Eject	 Stop / Hold		
 Stop/Eject	 Eject / Surround		

