

 







 
 


 
 
 




 
 


 
 
 

 
 
 


 
 
 



 




 
























Original		Replacement		Original		Replacement	
	Power		Power		Sleep		Sleep
	Stand-By		Shift + Power		Guide		Guide
	Text		Text		Info		Info
	Subtitle		Subt		Recall		Back
	Audio		Dual		Aspect		Shift + Format
	Mute		Mute		Menu		Menu
	1		1		Exit		Exit
	2		2		Up / CH+		Up
	3		3		Left / Vol-		Left
	4		4		OK		Ok
	5		5		Right / Vol+		Right
	6		6		Down / CH-		Down
	7		7		Vol+		Vol +
	8		8		Vol-		Vol -
	9		9		File List		Media
	0		0		Group		Smart
	TV/Rad		TV/R		Page+		Ch +





Original		Replacement		Original		Replacement	
	Page-		Ch -		F1		Shift + 1
	Red		Red		F2		Shift + 2
	Green		Green		F3		Shift + 3
	Yellow		Yellow		F4		Shift + 4
	Blue		Blue				
	REW		<<				
	Pause / Time Shift		Pause				
	Play		Play				
	FWD		>>				
	Rec		Rec				
	Stop		Stop				
	Slow		Shift + Play				
	Advance		>>				
	Mosaic		Options				
	Freeze		Shift + Pause				
	Zoom		Eject				
	V.Format		Format				

