







 

 





 

 

 



 
 


 

 




 


















 



 
 


















 



 




| Original | Replacement |
|---|---|
|  |  Power |
|  |  TV/Radio / |
|  |  Mute / Dimmer |
|  |  Text / Goto |
|  |  Subtitle / EQ |
|  |  Audio / Lang I/II |
|  |  D.Menu / Top |
|  |  Sleep / Timer |
|  |  Shift + Pause / Step / |
|  |  Zoom / Size |
|  |  Guide / EPG / -/-- |
|  |  Info / Angle |
|  |  Back / Return |
|  |  Display / Media |
|  |  Menu / Home |
|  |  Exit / Cancel / Clear |
|  |  Vol+ |

| Original | Replacement |
|---|---|
|  |  Left |
|  |  CH+ / Page+ |
|  |  Up |
|  |  Shift + CH+ / |
|  |  Vol- |
|  |  OK |
|  |  Right |
|  |  Shift + CH- / |
|  |  CH- / Page- |
|  |  Down |
|  |  Smart / List |
|  |  Play / Slow |
|  |  Stop / Hold |
|  |  << / Tune- |
|  |  Pause / Step / Freeze |
|  |  >> / Tune+ |
|  |  >> / Preset+ |





| Original | Replacement |
|--|---|
|  Rec |  Rec / Rec Mode |
|  I>/Slow |  Shift + Play / |
|  Red |  Red / Netflix / Search |
|  Green |  Green / APP / Repeat |
|  Yellow |  Yellow / YouTube / Repeat |
|  Blue |  Blue / Prime Video / Random |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |
|  7 |  7 |
|  8 |  8 |
|  9 |  9 |
|  V-Format |  Picture / Format |
|  0 |  0 |

| Original | Replacement |
|--|---|
|  Wide |  Setup / OPT / |

