








 

 

 






















 
 







Original		Replacement		Original		Replacement	
	Power		Power		Vol+		Vol+
	Mute		Mute / Dimmer		Vol-		Vol-
	1		1		Menu		Menu / Home
	2		2		Recall		Back / Return
	3		3		P+		Shift + CH+ /
	4		4		P-		Shift + CH- /
	5		5		Text		Text / Goto
	6		6		Exit		Exit / Cancel / Clear
	7		7		Fav		Fav / Marker / PC
	8		8		EPG		Guide / EPG / -/-
	9		9		Up		Up
	0 / Sleep		0		Left		Left
	0 / Sleep		Sleep / Timer		OK		OK
	TV/Rad		TV/Radio /		Right		Right
	TV / SAT		AV / Input / RDS		Down		Down
	CH+		CH+ / Page+		Red / V-FMT		Red / Netflix / Search
	CH-		CH- / Page-		Red / V-FMT		Picture / Format





Original	Replacement
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue / Timer	 Blue / Prime Video / Random
 Blue / Timer	 Shift + Sleep / Timer
 Info	 Info / Angle
 Subt	 Subtitle / EQ
 Audio	 Audio / Lang I/II
 Find	 Shift + Red / Netflix /
 Rec	 Rec / Rec Mode
 Stop	 Stop / Hold
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 <<	 << / Tune-
 >>	 >> / Tune+
 I<<	 I<< / Preset-
 >>I	 >>I / Preset+
 <	 Shift + Left

Original	Replacement
 II>	 Shift + Right
 Movie	 Smart / List
 USB	 Shift + 8
 USB	 Display / Media

