



Original	Replacement	Original	Replacement
	Power		CH+ / Page+
	Red		CH- / Page-
	Green		Up
	Yellow		Down
	Blue		Right
	TV/SAT		Left
	TV/Radio		OK
	Zoom		Vol+
	List		Vol-
	Audio		Recall
	EPG		P+
	Timer		P-
	Text		FAV
	Exit		1
	Menu		2
	M/P		3
	Mute		4
	Red / Netflix / Search		CH+ / Page+
	Green / APP / Repeat		CH- / Page-
	Yellow / YouTube / Repeat		CH+ / Page+
	Blue / Prime Video / Random		CH- / Page-
	AV / Input / RDS		Up
	TV/Radio /		Down
	Zoom / Size		Right
	Smart / List		Left
	Audio / Lang I/II		OK
	Guide / EPG / -/--		Vol+
	Sleep / Timer		Vol-
	Text / Goto		Recall
	Exit / Cancel / Clear		P+
	Menu / Home		P-
	Display / Media		FAV
	Mute / Dimmer		1
			2
			3
			4





	Original	Replacement		Original	Replacement
	5	5			
	6	6			
	7	7			
	8	8			
	9	9			
	0	0			
	Info	INFO			
	Pause	II			





Original	Replacement
Power	Power
SAT	Smart / List
Info	Info / Angle
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0 / Zoom	Zoom / Size
0 / Zoom	0
Audio	Audio / Lang I/II
Mute	Mute / Dimmer
Recall	Back / Return

Original	Replacement
FAV	Fav / Marker / PC
Up / CH+	CH+ / Page+
Down / CH-	Down
Up / CH+	Up
Right / Vol+	Right
Right / Vol+	Vol+
Down / CH-	CH- / Page-
Left / Vol-	Vol-
Left / Vol-	Left
OK	OK
Menu	Menu / Home
Exit	Exit / Cancel / Clear
Blue / Pause	Blue / Prime Video / Random
Blue / Pause	Pause / Step / Freeze
Red / Text	Red / Netflix / Search
Red / Text	Text / Goto
Multivideo	Display / Media







 





















 


 






























 


 

Original	Replacement	Original	Replacement
Yellow / Subtitle	Yellow / YouTube / Repeat		
Yellow / Subtitle	Subtitle / EQ		
TV / AV	AV / Input / RDS		
Green / P/N	Green / APP / Repeat		
TV / Radio	TV/Radio /		
SAT	Shift + 0		
EPG	Guide / EPG / -/--		

Original	Replacement














Original	Replacement	Original	Replacement
Mute	 Mute / Dimmer	Menu Down	 Down
PWR On/Off	 Power	Back	 Back / Return
App	 +  Shift + Green / APP /	Volume+	 Vol+
Epg	 Guide / EPG / -/--	CH/Page+	 CH+ / Page+
Info	 Info / Angle	Volume-	 Vol-
Subt.List	 Subtitle / EQ	CH/Page-	 CH- / Page-
TV	 TV/Radio /	Audio	 Audio / Lang I/II
Text	 Text / Goto	1. ?	 1
Zoom	 Zoom / Size	2abc	 2
Menu	 Menu / Home	3def	 3
TV/SAT	 AV / Input / RDS	4ghi	 4
Menu Up	 Up	5jkl	 5
Display	 Display / Media	6mno	 6
Menu Left	 Left	7pqrm	 7
OK Enter	 OK	8tuv	 8
Menu Right	 Right	9wxyz	 9
Exit	 Exit / Cancel / Clear	Guide Pilote	 +  Shift + Guide / EPG / -/--

Original	Replacement	Original	Replacement
Mute	 Mute / Dimmer	Menu Down	 Down
PWR On/Off	 Power	Back	 Back / Return
App	 +  Shift + Green / APP /	Volume+	 Vol+
Epg	 Guide / EPG / -/--	CH/Page+	 CH+ / Page+
Info	 Info / Angle	Volume-	 Vol-
Subt.List	 Subtitle / EQ	CH/Page-	 CH- / Page-
TV	 TV/Radio /	Audio	 Audio / Lang I/II
Text	 Text / Goto	1. ?	 1
Zoom	 Zoom / Size	2abc	 2
Menu	 Menu / Home	3def	 3
TV/SAT	 AV / Input / RDS	4ghi	 4
Menu Up	 Up	5jkl	 5
Display	 Display / Media	6mno	 6
Menu Left	 Left	7pqrm	 7
OK Enter	 OK	8tuv	 8
Menu Right	 Right	9wxyz	 9
Exit	 Exit / Cancel / Clear	Guide Pilote	 +  Shift + Guide / EPG / -/--


















































Original	Replacement	Original	Replacement
0/10	 0		
FAV Pref.	 Fav / Marker / PC		
Red	 Red / Netflix / Search		
Green	 Green / APP / Repeat		
Yellow	 Yellow / YouTube / Repeat		
Blue	 Blue / Prime Video / Random		
Dec/Pause	 Pause / Step / Freeze		
	 Smart / List		
	 D.Menu / Top		











Original	Replacement	Original	Replacement
Power	 Power	Recall	 Back / Return
Mute	 Mute / Dimmer	Vol+	 Vol+
Pause	 Pause / Step / Freeze	List	 Smart / List
Audio	 Audio / Lang I/II	P+	 CH+ / Page+
Zoom	 Zoom / Size	Vol-	 Vol-
Timer	 Sleep / Timer	M/P	 Display / Media
Tv/Radio	 TV/Radio /	P-	 CH- / Page-
Text	 Text / Goto	1	 1
Tv/SAT	 AV / Input / RDS	2	 2
Menu	 Menu / Home	3	 3
Up/CH+	 Up	4	 4
Info	 Info / Angle	5	 5
Left	 Left	6	 6
OK	 OK	7	 7
Right	 Right	8	 8
Exit	 Exit / Cancel / Clear	9	 9
Down/CH-	 Down	EPG	 Guide / EPG / -/--

Original	Replacement	Original	Replacement
Power	 Power	Recall	 Back / Return
Mute	 Mute / Dimmer	Vol+	 Vol+
Pause	 Pause / Step / Freeze	List	 Smart / List
Audio	 Audio / Lang I/II	P+	 CH+ / Page+
Zoom	 Zoom / Size	Vol-	 Vol-
Timer	 Sleep / Timer	M/P	 Display / Media
Tv/Radio	 TV/Radio /	P-	 CH- / Page-
Text	 Text / Goto	1	 1
Tv/SAT	 AV / Input / RDS	2	 2
Menu	 Menu / Home	3	 3
Up/CH+	 Up	4	 4
Info	 Info / Angle	5	 5
Left	 Left	6	 6
OK	 OK	7	 7
Right	 Right	8	 8
Exit	 Exit / Cancel / Clear	9	 9
Down/CH-	 Down	EPG	 Guide / EPG / -/--





Original	Replacement
0/Sleeptimer	 0
FAV	 Fav / Marker / PC
Red	 Red / Netflix / Search
Green	 Green / APP / Repeat
Yellow	 Yellow / YouTube / Repeat
Blue	 Blue / Prime Video / Random

Original	Replacement

