



Original	Replacement
Digital	Display / Media
Yellow/Theater Modes/Info	Yellow / YouTube / Repeat
Power	Power
Tv	Shift + 1
DVD	Shift + 2
Green/Stereo/[...]	Green / APP / Repeat
Blue/Delay/Title	Blue / Prime Video / Random
Red/Center/Audio	Red / Netflix / Search
Up	Up
Violet/Level/Came	Fav / Marker / PC
Tape	Shift + 5
SAT/CAB	Shift + 0
Tuner	Shift + 6
Video/VCR	Shift + 4
Left/-	Left
OK	OK
Right/+	Right

Original	Replacement
PTY	Text / Goto
Down	Down
Menu/RDS	Menu / Home
Vol+	Vol+
PR+/>>I	CH+ / Page+
Vol-	Vol-
PR-/I<<	CH- / Page-
Mute	Mute / Dimmer
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9









Original	Replacement
Digital	Display / Media
Yellow/Theater Modes/Info	Yellow / YouTube / Repeat
Power	Power
TV	Shift + 1
DVD	Shift + 2
Green/Stereo/[...]	Green / APP / Repeat
Blue/Delay/Title	Blue / Prime Video / Random
Red/Center/Audio	Red / Netflix / Search
Up	Up
Violet/Level/Came	Fav / Marker / PC
Tape	Shift + 5
SAT/CAB	Shift + 0
Tuner	Shift + 6
Video/VCR	Shift + 4
Left/-	Left
OK	OK
Right/+	Right

Original	Replacement
Down	Down
Menu/RDS	Menu / Home
Vol+	Vol+
PR+ />>I	>>I / Preset+
PR+ />>I	CH+ / Page+
Vol-	Vol-
PR- /I<<	I<< / Preset-
PR- /I<<	CH- / Page-
Mute	Mute / Dimmer
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8









Original	Replacement
Digital	Display / Media
Yellow/Theater Modes/Info	Yellow / YouTube / Repeat
Power	Power
TV	Shift + 1
DVD	Shift + 2
Green/Stereo/[...]	Green / APP / Repeat
Blue/Delay/Title	Blue / Prime Video / Random
Red/Center/Audio	Red / Netflix / Search
Up	Up
Violet/Level/Came	Fav / Marker / PC
Tape	Shift + 5
SAT/CAB	Shift + 0
Tuner	Shift + 6
Video/VCR	Shift + 4
Left/-	Left
OK	OK
Right/+	Right







 

 
 
 




 








 


 


 

















Original	Replacement
PTY	Text / Goto
Down	Down
Menu/RDS	Menu / Home
Vol+	Vol+
PR+ />>I	CH+ / Page+
Vol-	Vol-
PR- /I<<	CH- / Page-
Mute	Mute / Dimmer
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9

 

 

 

 





 

 

 

 

 







 















Original	Replacement	Original	Replacement
 Digital	 Display / Media	 Right/+	 Right
 Yellow/Theater Modes/Info	 Yellow / YouTube / Repeat	 PTY	 Text / Goto
 Power	 Power	 Down	 Down
 Tv	 Shift + 1	 Menu/RDS	 Menu / Home
 DVD	 Shift + 2	 Menu/RDS	 AV / Input / RDS
 Green/Stereo/[...]	 Green / APP / Repeat	 Vol+	 Vol+
 Blue/Delay/Title	 Blue / Prime Video / Random	 PR+ />>I	 CH+ / Page+
 Red/Center/Audio	 Audio / Lang I/II	 PR+ />>I	 >>I / Preset+
 Red/Center/Audio	 Red / Netflix / Search	 Vol-	 Vol-
 Up	 Up	 PR-/I<<	 CH- / Page-
 Violet/Camera/Le	 Fav / Marker / PC	 PR-/I<<	 I<< / Preset-
 Tape	 Shift + 5	 Mute	 Mute / Dimmer
 SAT/CAB	 Shift + 0	 1	 1
 Tuner	 Shift + 6	 2	 2
 Video/VCR	 Shift + 4	 3	 3
 Left/-	 Left	 4	 4
 OK	 OK	 5	 5

Original	Replacement	Original	Replacement
 Right/+	 Right	 Right/+	 Right
 PTY	 Text / Goto	 Down	 Down
 Menu/RDS	 Menu / Home	 Menu/RDS	 AV / Input / RDS
 Vol+	 Vol+	 PR+ />>I	 CH+ / Page+
 PR+ />>I	 >>I / Preset+	 Vol-	 Vol-
 PR-/I<<	 CH- / Page-	 PR-/I<<	 I<< / Preset-
 Mute	 Mute / Dimmer	 1	 1
 2	 2	 3	 3
 4	 4	 5	 5



