


 


 
 


 
 
 



 
 



 
 
 
 



 




 

 

 


 



 
 





 

 

 



 












Original	Replacement	Original	Replacement
 Power	 Power	 Exit	 Exit
 Mute	 Mute	 Up	 Up
 1	 1	 Down	 Down
 2	 2	 Right	 Right
 3	 3	 Left	 Left
 4	 4	 OK	 Ok
 5	 5	 Vol+	 Vol +
 6	 6	 Vol-	 Vol -
 7	 7	 Sound	 Dual
 8	 8	 P/C	 Pre Ch
 9	 9	 CH+	 Ch +
 0	 0	 CH-	 Ch -
 Eject/Tv Audio	 Eject	 Sleep	 Sleep
 Recall/Goto	 Back	 Aspect	 3D
 Tv Menu	 Menu	 Rec/DVD Setup	 Rec
 Source	 AV	 Tv/Radio	 TV/R
 DVD Menu	 D. Menu	 Text	 Text





Original	Replacement	Original	Replacement
EPG/Play-Pause	Guide	List	List
Stop/FAV	+  Shift + Pre Ch	Index	+  Shift + Info
Info	Info	Subpage	+  Shift + Subt
Red/DVD/USB	Red	Size	Format
Green/Title	Green	MIX	+  Shift + Sleep
Yellow/PBC	Yellow	Freeze	Media
Blue/Angle	Blue		
<<<	<<<		
>>>	>>>		
I<<<	I<<<		
>>I	>>I		
Play/Return (Red)	Play		
Pause/Display	Pause		
Stop/DVD Audio (Red)	Stop		
Subtitle	Subt		
Reveal	Options		
Hold	Smart		

