















 

 



 

































 

 



 









Original	Replacement	Original	Replacement
	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	DTV/ATV		Info / Angle
	0		0
	Recall		Back / Return
	P.Mode		Picture / Format
	S.Mode		Sound / Title
	Sleep		Sleep / Timer
	Vol+		Vol+
	MTS		Setup / OPT /
	CH+		CH+ / Page+
	Vol-		Vol-
	RecList		Smart / List
	CH-		CH- / Page-
	FAV/List		Fav / Marker / PC
	Rec		Rec / Rec Mode
	Freeze		Pause / Step / Freeze
	Menu		Menu / Home
	Up		Up
	Source		AV / Input / RDS
	Left		Left
	Enter		OK
	Right		Right
	Exit		Exit / Cancel / Clear
	Down		Down





Original	Replacement
Display	Display / Media
Red	Red / Netflix / Search
Green	Green / APP / Repeat
Yellow	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random
<<	<< / Tune-
Guide	Guide / EPG / -/--
Play	Play / Slow
Pause/TimeShift	Shift + Pause / Step /
>>Aspect	>> / Tune+
I<</Cancel	Shift + Exit / Cancel / Clear
I<</Cancel	I<< / Preset-
>>I/Sub.PG	>>I / Preset+
Stop/Index	Stop / Hold
Tv/Radio	TV/Radio /
Subtitle	Subtitle / EQ
Reveal	D.Menu / Top

Original	Replacement
Size	Zoom / Size
Hold	Shift + Stop /
Text	Text / Goto



Menu