


 

 

 
 


 





 


 





 



 
 







 



 
 
 




Original	Replacement	Original	Replacement
	Power		Power
	Mute		Mute
	Eject		Eject
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Recall		Pre Ch
	-/--		Shift + Guide
	Vol+		Vol +
	Aspect		Format
	Nicam		Shift + Dual
	Vol-		Vol -
	CH+		Ch +
	CH-		Ch -
	Enter		Ok
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Display		Shift + Info
	LCD Menu		Menu
	Exit/DVD Setup		Exit
	Sleep		Sleep
	Input		AV
	Red/Prog		Red
	Tv/Radio		TV/R
	Green/Intro/Audio		Green





Original	Replacement
Yellow/Repeat/Freeze	Yellow
Blue/A-B	Blue
EPG	Guide
Text	Text
Subtitle	Subt
D.Menu	D. Menu
Title	Options
Zoom/Subpage	Shift + Eject
D.Disp	Info
Goto	Shift + Pre Ch
P.Mode	Shift + Format
>>I/Hold	Shift + Ch -
Play/Fav	Play
Stop/FAV-	Stop
>I/FAV+	>>I
I<<	I<<
Audio/Lang	Shift + Menu

Original	Replacement
<</Index	<<
>>/Size	>>
Angle/Reveal	Rec
S.Mode	Dual

