

 



























 



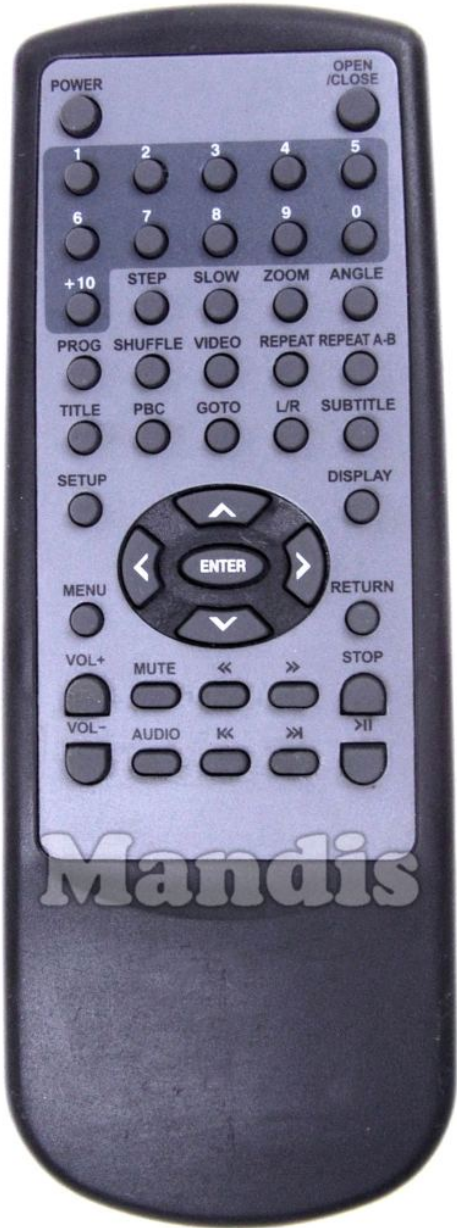 


Original	Replacement
 Power	 Power
 Open / Close	 Eject / Surround
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 +10	 Guide / EPG / -/--
 Step	 Shift + Pause / Step /
 Slow	 Shift + Play /
 Zoom	 Zoom / Size
 Angle	 Info / Angle

Original	Replacement
 Prog	 TV/Radio /
 Shuffle	 Blue / Prime Video / Random
 Video	 Smart / List
 Repeat	 Green / APP / Repeat
 Repeat A-B	 Yellow / YouTube / Repeat
 Title	 Sound / Title
 PBC	 Picture / Format
 Goto	 Text / Goto
 L/R	 D.Menu / Top
 Subtitle	 Subtitle / EQ
 Setup	 Setup / OPT /
 Up	 Up
 Display	 Display / Media
 Left	 Left
 Enter	 OK
 Right	 Right
 Menu	 Menu / Home





	Original	Replacement	Original	Replacement
	 Down	 Down		
	 Return	 Back / Return		
	 Vol+	 Vol+		
	 Mute	 Mute / Dimmer		
	 <<	 << / Tune-		
	 >>	 >> / Tune+		
	 Stop	 Stop / Hold		
	 Vol-	 Vol-		
	 Audio	 Audio / Lang I/II		
	 I<<	 I<< / Preset-		
	 >>I	 >>I / Preset+		
	 Play / Pause	 Play / Slow		
	 Play / Pause	 Pause / Step / Freeze		

