























 


 
 
 


















 













 














| Original | | Replacement | | Original | | Replacement | |
|---|----------|---|---------------------------|---|------------------|---|--------------------------------|
|  | Power |  | Power |  | 9 |  | 9 |
|  | Sleep |  | Sleep / Timer |  | EPG |  | Guide / EPG / -/- |
|  | Screen |  | Picture / Format |  | 0 |  | 0 |
|  | Presets |  | Setup / OPT / |  | Swap |  | Fav / Marker / PC |
|  | ↔ |  | TV/Radio / |  | Photo/Music/Movi |  | D.Menu / Top |
|  | FAV |  | Shift + Fav / Marker / PC |  | World |  | Smart / List |
|  | Lang |  | Audio / Lang I/II |  | Source |  | AV / Input / RDS |
|  | Subtitle |  | Subtitle / EQ |  | Menu |  | Menu / Home |
|  | TXT |  | Text / Goto |  | Up |  | Up |
|  | 1 |  | 1 |  | Left |  | Left |
|  | 2 |  | 2 |  | OK |  | OK |
|  | 3 |  | 3 |  | Right |  | Right |
|  | 4 |  | 4 |  | Down |  | Down |
|  | 5 |  | 5 |  | C |  | Exit / Cancel / Clear |
|  | 6 |  | 6 |  | Disp. |  | Display / Media |
|  | 7 |  | 7 |  | Search Mode |  | Shift + Red / Netflix / Search |
|  | 8 |  | 8 |  | Return |  | Back / Return |





| Original | Replacement |
|---|--|
|  |  CH+ / Page+ |
|  |  Info / Angle |
|  |  Vol+ |
|  |  CH- / Page- |
|  |  Mute / Dimmer |
|  |  Vol- |
|  |  Rec / Rec Mode |
|  |  Pause / Step / Freeze |
|  |  I<< / Preset- |
|  |  >>I / Preset+ |
|  |  << / Tune- |
|  |  Play / Slow |
|  |  Stop / Hold |
|  |  >> / Tune+ |
|  |  Red / Netflix / Search |
|  |  Zoom / Size |
|  |  Green / APP / Repeat |

| Original | Replacement |
|---|---|
|  |  Yellow / YouTube / Repeat |
|  |  Blue / Prime Video / Random |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |

