















 



 











 



 



 

 





 
 

 




 



 






















Original		Replacement		Original		Replacement	
	Power		Power		Left		Left
	Tv/Rad		TV/Radio /		CH+		CH+ / Page+
	Mute		Mute / Dimmer		Up		Up
	Text		Text / Goto		↑		Shift + CH+ /
	[...]/Subtitle		Subtitle / EQ		Vol-		Vol-
	Audio		Audio / Lang I/II		OK		OK
	[+]/Mosaic		D.Menu / Top		Right		Right
	Sleep		Sleep / Timer		↓		Shift + CH- /
	II/Freeze		Shift + Pause / Step /		CH-		CH- / Page-
	Zoom		Zoom / Size		Down		Down
	Guide		Guide / EPG / -/--		File List		Smart / List
	i/Info		Info / Angle		Play		Play / Slow
	Recall		Back / Return		Stop		Stop / Hold
	Group		Display / Media		<<		<< / Tune-
	Menu		Menu / Home		Pause		Pause / Step / Freeze
	Exit		Exit / Cancel / Clear		>>		>> / Tune+
	Vol+		Vol+		→		>> / Preset+





Original	Replacement
 Rec	 Rec / Rec Mode
 I>/Slow	 +  Shift + Play /
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 V-Format	 Picture / Format
 0	 0

Original	Replacement
 Wide	 Setup / OPT /

