 
 



 















 

 


 

 

 

 




 
 

 



 
 
 

 




Original		Replacement		Original		Replacement	
	Power		Power		Quick Select 2		Text
	Input TV Audio		1		Quick Select 3		Eject
	Input Tuner		2		Quick Select 4		AV
	Input Bluetooth		3		CH + / Page +		Ch +
	Input Phono		4		CH - / Page -		Ch -
	Input USB		5		Eco		3D
	Input HEOS		6		Mute		Mute
	Input Internet Radio		7		Volume +		Vol +
	Input CBL/SAT		8		Volume -		Vol -
	Input DVD		9		Info		Info
	Input Blu-ray		Guide		Option		Options
	Input Aux1		0		Setup		Menu
	Input Game		Pre Ch		Back		Back
	Input Aux2		Shift + Smart		Back		Exit
	Input Media		Media		Up		Up
	Input CD		Smart		Down		Down
	Quick Select 1		D. Menu		Right		Right


 



 






 






 


 










Original	Replacement	Original	Replacement
	Left		Left
	Enter		Ok
	I<< / Tune -		I<<
	Play		Play
	>>I / Tune +		>>I
	<<		<<
	Pause		Pause
	Stop		Stop
	>>		>>
	Green / Sound Mode Movie		Green
	Red / Sound Mode Music		Red
	Blue / Sound Mode Game		Blue
	Yellow / Sound Mode Pure		Yellow
	1		Shift + 1
	2		Shift + 2
	3		Shift + 3
	4		Shift + 4
	5		Shift + 5
	6		Shift + 6
	7		Shift + 7
	8		Shift + 8
	9		Shift + 9
	0		Shift + 0
	Enter		Shift + Pre Ch
	Sleep		Sleep

 

 





 

















Original		Replacement		Original		Replacement	
	Power		Power		Quick Select 2		Text
	Input TV Audio		1		Quick Select 3		Eject
	Input Tuner		2		Quick Select 4		AV
	Input Bluetooth		3		CH + / Page +		Ch +
	Input Phono		4		CH - / Page -		Ch -
	Input USB		5		Mute		Mute
	Input HEOS		6		Volume +		Vol +
	Input Internet Radio		7		Volume -		Vol -
	Input CBL/SAT		8		Up		Up
	Input DVD		9		Down		Down
	Input Blu-ray		Guide		Right		Right
	Input Aux1		0		Left		Left
	Input Game		Pre Ch		Enter		Ok
	Input Aux2		Shift + Smart		Back		Back
	Input Media		Media		Back		Exit
	Input CD		Smart		I<< / Tune -		I<<
	Quick Select 1		D. Menu		Play		Play





	Original	Replacement	Original	Replacement
	>>I / Tune +	 >>I		
	<<	 <<		
	Pause	 Pause		
	Stop	 Stop		
	>>	 >>		
	1	 SHIFT +  Shift + 1		
	2	 SHIFT +  Shift + 2		
	3	 SHIFT +  Shift + 3		
	4	 SHIFT +  Shift + 4		
	5	 SHIFT +  Shift + 5		
	6	 SHIFT +  Shift + 6		
	7	 SHIFT +  Shift + 7		
	8	 SHIFT +  Shift + 8		
	9	 SHIFT +  Shift + 9		
	0	 SHIFT +  Shift + 0		
	Enter	 SHIFT +  Shift + Pre Ch		
	Sleep	 PROG SLEEP Sleep		


 
 




 





 





 







 
 









Original		Replacement		Original		Replacement	
	Quick Select 1		D. Menu		Input Game		Pre Ch
	Enter	 + 	Shift + Pre Ch		Input Aux2	 + 	Shift + Smart
	Quick Select 4		AV		Input Media		Media
	Quick Select 3		Eject		Input CD		Smart
	Quick Select 2		Text		CH + / Page +		Ch +
	Power		Power		CH - / Page -		Ch -
	Input TV Audio		1		Mute		Mute
	Input Tuner		2		Volume +		Vol +
	Input Bluetooth		3		Volume -		Vol -
	Input Phono		4		Up		Up
	Input USB		5		Down		Down
	Input HEOS		6		Right		Right
	Input Internet Radio		7		Back		Exit
	Input CBL/SAT		8		Left		Left
	Input DVD		9		Enter		Ok
	Input Blu-ray		Guide		Back		Back
	Input Aux1		0		I<< / Tune -		I<<





Original	Replacement	Original	Replacement
 Play	 Play		
 >>I / Tune +	 >>I		
 <<	 <<		
 Pause	 Pause		
 1	 Shift + 1		
 2	 Shift + 2		
 3	 Shift + 3		
 4	 Shift + 4		
 5	 Shift + 5		
 6	 Shift + 6		
 7	 Shift + 7		
 8	 Shift + 8		
 9	 Shift + 9		
 0	 Shift + 0		
 Stop	 Stop		
 >>	 >>		
 Sleep	 Sleep		

