




 
 
 
 
 













 

 

 





 




Original	Replacement
 Power On	 Power
 Power Off	 Shift + Power
 Dimmer	 Guide
 Open/Close	 Eject
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Repeat A-B	 3D
 Repeat	 Text
 Random	 Media

Original	Replacement
 Zoom	 Shift + Eject
 Clear	 Exit
 Search Mode	 TV/R
 Red	 Red
 Green	 Green
 Yellow	 Yellow
 Blue	 Blue
 Top Menu	 Shift + Menu
 Menu/Pop Menu	 Menu
 Setup	 Options
 Return	 Back
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Enter	 Ok
 Angle	 AV





 



 

 

 
 


 









 











 



 

 

 




 










 
 


Original		Replacement		Original		Replacement	
	Subtitle		Subt				
	Audio		Dual				
	Pure Direct		Format				
	Display		Info				
	Mode		Smart				
	I<< Skip		I<<				
	Skip >>I		>>I				
	Stop		Stop				
	Play		Play				
	<<		<<				
	>>		>>				
	Still/Pause		Pause				







Original	Replacement	Original	Replacement
 Power On	 Power	 Repeat A-B	 3D
 Power Off	 Shift + Power	 Clear	 Exit
 Dimmer	 Guide	 Search Mode	 TV/R
 Open/Close	 Eject	 Red	 Red
 1	 1	 Green	 Green
 2	 2	 Yellow	 Yellow
 3	 3	 Blue	 Blue
 4	 4	 Top Menu	 Shift + Menu
 5	 5	 Pop Up	 Menu
 6	 6	 Setup	 Options
 7	 7	 Return	 Back
 8	 8	 Up	 Up
 9	 9	 Down	 Down
 0	 0	 Right	 Right
 Repeat	 Text	 Left	 Left
 Random	 Media	 Enter	 Ok
 Zoom	 Shift + Eject	 Subtitle	 Subt





Original		Replacement		Original		Replacement	
	Audio		Dual				
	Angle		AV				
	Pure Direct		Format				
	Display		Info				
	Mode		Smart				
	I<< Skip		I<<				
	Skip >>I		>>I				
	Stop		Stop				
	Play		Play				
	Still/Pause		Pause				
	<<		<<				
	>>		>>				

