






 

 

 

 


 
 

 
 
 
 


 


 
 


 
 
 


 

 

 

 

 
 
 
 


 

 

 
 

 

 
 
 
 
 
 
 





Original	Replacement
 Power On	 Power
 Power Off	 +  Shift + Power
 Zone Device On	 Smart
 Zone Device Off	 +  Shift + Smart
 Net/USB	 +  Shift + 1
 iPod/Play	 +  Shift + 2
 DVD	 +  Shift + 3
 BD	 +  Shift + 4
 Tuner	 +  Shift + 5
 Dock	 +  Shift + 6
 SAT TU	 +  Shift + 7
 SAT/CBL	 +  Shift + 8
 Game	 +  Shift + 9
 V.AUX	 +  Shift + Guide
 Phono	 +  Shift + 0
 CD	 +  Shift + Pre Ch
 DVR	 +  Shift + Info

Original	Replacement
 TV	 TV/R
 Monitor Select	 Blue
 Quick Select 1/BD	 Red
 Quick Select 2/(SAT/CBL)	 Green
 Quick Select	 Yellow
 CH+	 Ch +
 CH-	 Ch -
 Source Select	 AV
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute
 CH Level/Top	 Info
 Menu	 Menu
 Search/Setup	 Media
 Up	 Up
 Return	 Back
 Down	 Down



 




Original	Replacement	Original	Replacement
			
Right	Right	Pure	Pre Ch
			
Left	Left	1	1
			
Enter	Ok	2	2
			
Play	Play	3	3
			
>>/Mode	>>	4	4
			
<</Band	<<	5	5
			
>>I/Tuning▲	>>I	6	6
			
Stop	Stop	7	7
			
Pause	Pause	8	8
			
I<</Tuning▼	I<<	9	9
			
Multeq	Options	0	0
			
DYN EQ/VOL	Dual	+10	Guide
			
A-DSX	Subt	Shift	List
			
Restorer	Exit	Link Menu/Power	Eject
			
Standard	Text	TV Input	D. Menu
			
D/ST	Format	Sleep	Sleep
			
Simulation	3D	Memory/Party	Rec







 
 
 


 
 








 

 

 
 


 

 
 
 
 
 
 
 
 
 
 

 

 
 


Original	Replacement
 Power On	 Power
 Power Off	 +  Shift + Power
 Zone Device On	 Smart
 Zone Device Off	 +  Shift + Smart
 Net/USB	 +  Shift + 1
 iPod/Play	 +  Shift + 2
 DVD	 +  Shift + 3
 BD	 +  Shift + 4
 Tuner	 +  Shift + 5
 Dock	 +  Shift + 6
 SAT TU	 +  Shift + 7
 SAT/CBL	 +  Shift + 8
 Game	 +  Shift + 9
 V.AUX	 +  Shift + Guide
 Phono	 +  Shift + 0
 CD	 +  Shift + Pre Ch
 DVR	 +  Shift + Info

Original	Replacement
 TV	 TV/R
 Quick Select 1/BD	 Red
 Quick Select 2/(SAT/CBL)	 Green
 Quick Select 3	 Yellow
 CH+	 Ch +
 CH-	 Ch -
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute
 Menu	 Menu
 CH Level/Top	 Info
 Return	 Back
 Search/Setup	 AV
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left





 


 


Original		Replacement		Original		Replacement	
	Enter		Ok		0		0
	<</Band		<<		+10		Guide
	Play		Play		Shift		3D
	>>/Mode		>>		Link Menu/Power		Media
	>>I/Tuning/▲		>>I		TV Input		Shift + AV
	Stop		Stop		Sleep		Sleep
	Pause		Pause		Memory/Party		Rec
	I<</Tuning▼		I<<				
	1		1				
	2		2				
	3		3				
	4		4				
	5		5				
	6		6				
	7		7				
	8		8				
	9		9				





 
 
 
 
 
 


Original	Replacement
 Power On	 Power
 Power Off	 +  Shift + Power
 Zone Device On	 Smart
 Zone Device Off	 +  Shift + Smart
 NET/USB	 +  Shift + 1
 iPod/Play	 +  Shift + 2
 DVD	 +  Shift + 3
 BD	 +  Shift + 4
 Tuner	 +  Shift + 5
 Dock	 +  Shift + 6
 SAT TU	 +  Shift + 7
 SAT/CBL	 +  Shift + 8
 Game	 +  Shift + 9
 V.AUX	 +  Shift + Guide
 Phono	 +  Shift + 0
 CD	 +  Shift + Pre Ch
 DVR	 +  Shift + Info

Original	Replacement
 TV	 TV/R
 Quick Select 1/BD	 Red
 Quick Select 2/(SAT/CBL)	 Green
 Quick Select	 Yellow
 CH+	 Ch +
 CH-	 Ch -
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute
 CH.Level/Top	 Info
 Menu	 Menu
 Search/Setup	 AV
 Return	 Back
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left





Original		Replacement		Original		Replacement	
	Enter		Ok		9		9
	<</Band		<<		+10		Guide
	Play		Play		Shift		3D
	>>/Mode		>>		Link Menu/Power		Media
	>> /Tuning▲		>>		Tv Input		D. Menu
	Stop		Stop		Sleep		Sleep
	Pause		Pause		Memory/Party		Rec
	<</Tuning▼		<<				
	1		1				
	2		2				
	3		3				
	4		4				
	5		5				
	6		6				
	7		7				
	8		8				
	0		0				

