 
 

 
 

 

 

 



 
 
 
 
 

 

 

 

 

 








Original	Replacement	Original	Replacement
 Power	 Power	 8	 8
 Mute	 Mute	 9	 9
 Vol+	 Vol +	 0	 0
 Vol-	 Vol -	 Shift + Guide	 Shift + Guide
 Prog+	 Ch +	 PRE	 Pre Ch
 Prog-	 Ch -	 Up/P+	 Up
 [≡]/TXT	 Text	 Down/P-	 Down
 [ + ]/Display	 Info	 Right/Vol+	 Right
 Tv/DVB-T	 Smart	 Left/Vol-	 Left
 [ ]/Line	 Media	 [II]/Tv Menu	 Menu
 1	 1	 -IXI-/Exit	 Exit
 2	 2	 Timer/Sleep	 Shift + Power
 3	 3	 -I/I-/P.STD	 Shift + Format
 4	 4	 -I/I-/S.STD	 Shift + Dual
 5	 5	 [ <> ]/P.Size	 Format
 6	 6	 Open/Close	 Eject
 7	 7	 Rec	 Rec





Original	Replacement	Original	Replacement
	Stop		[ /≡]/Audio
	Play		SOUND DUAL Dual
	Pause		AD SUBT Subt
	<</< Slow		SETTINGS OPT Options
	Slow >/>>		SEARCH TVR TV/R
	l<</<l Step		[<≡]/List/Angle
	Step l>/>>l		SHIFT + CH - Shift + Ch -
	Red/Setup		[≡>]/Bookmark/O
	Green/Input		[≡o]/Zoom/EPG
	Yellow/Title		[≡X]/Cancel/i
	Blue/Menu		MS
	PIP On/Off		[▼]/Still
	PIP Source		OK
	PIP Sound		
	PIP Swap		
	Timer/repeat		
	[≡i]/A-B		

