 


 


 

 
 
 
 
 
 
 
 
 


 
 


 

 
 
 

 
 



 
 
 
 
 

 
 
 
 

 







Original	Replacement	Original	Replacement
	Power		Power
	Mute		Mute
	Vol+		Vol +
	Vol-		Vol -
	Prog+		Ch +
	Prog-		Ch -
	[≡]/TXT		Text
	[+]/Display		Info
	Tv/DVB-T		Smart
	[ ]/Line		Media
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/--		Shift + Guide
	PRE		Pre Ch
	Up/P+		Up
	Down/P-		Down
	Right/Vol+		Right
	Left/Vol-		Left
	[II]/Tv Menu		Menu
	-IXI-/Exit		Exit
	Timer/Sleep		Shift + Power
	-I/I-/P.STD		Shift + Format
	-I/I-/S.STD		Shift + Dual
	[<>]/P.Size		Format
	Open/Close		Eject
	Rec		Rec





Original		Replacement		Original		Replacement	
	Stop		Stop		[ /≡]/Audio		Dual
	Play		Play		[≡◆]/Subtitle		Subt
	Pause		Pause		[≡?]/Goto		Options
	<</< Slow		<<		[≡+]/Program/Me		TV/R
	Slow >/>>		>>		[<≡]/List/Angle		Shift + Ch -
	l<</<l Step		l<<		[≡>]/Bookmark/O		Shift + Ch +
	Step l>/>>l		>>l		[≡o]/Zoom/EPG		Guide
	Red/Setup		Red		[≡X]/Cancel/i		3D
	Green/Input		Green		MS		Back
	Yellow/Title		Yellow		[▼]/Still		AV
	Blue/Menu		Blue		OK		Ok
	PIP On/Off		Shift + 3D				
	PIP Source		Shift + AV				
	PIP Sound		Shift + TV/R				
	PIP Swap		Shift + Subt				
	Timer/repeat		Shift + Text				
	[≡i]/A-B		Shift + Info				

