



Original		Replacement		Original		Replacement	
	Power		Power		8		8
	Open / Close		Eject		9		9
	TV / DTV		TV/R		-/--		Shift + Guide
	Line		AV		0		0
	DVD		Media		PRE		Pre Ch
	TTX		Text		Vol +		Vol +
	PIP ON / OFF		Shift + Power		Vol -		Vol -
	PIP Swap		Shift + Back		Prog +		Ch +
	PIP Source		Shift + AV		Prog -		Ch -
	PIP Sound		Shift + Dual		M/S		Subt
	1		1		Still		Shift + Pause
	2		2		Sleep		Sleep
	3		3		TV Menu		Menu
	4		4		P.STD		Format
	5		5		S.STD		Shift + Subt
	6		6		P.Size		Shift + Format
	7		7		Exit / Cancel		Exit





Original	Replacement
	 Up
	 Right
	 Down
	 Left
	 Ok
	 Mute
	 Shift + Info
	 Stop
	 Play
	 Pause
	 <<
	 >>
	 I<<
	 >>I
	 Red / Setup
	 Green / Title
	 Yellow / Menu

Original	Replacement
	 Blue
	 Shift + Text
	 Shift + TV/R
	 Dual
	 3D
	 Back
	 Shift + Menu
	 List
	 Options
	 Guide
	 Shift + Exit
	 Info

