



Original	Replacement	Original	Replacement
Power	Power	CH+	Ch +
Source	AV	CH-	Ch -
Sleep	Sleep	Down	Down
Mute	Mute	Right	Right
1	1	Left	Left
2	2	Vol-	Vol -
3	3	Vol+	Vol +
4	4	Enter	Ok
5	5	Red	Red
6	6	Green	Green
7	7	Yellow	Yellow
8	8	Blue	Blue
9	9	Info	Info
0	0	EPG	Guide
-/--	Shift + Guide	Menu	Menu
Recall	Pre Ch	Nicam	Media
Up	Up	FAV+	>>





Original		Replacement		Original	Replacement
FAV-	FAV-	<<	<<		
TXT	TXT	REPEAT TEXT	Text		
EDITOR/GROUP	Edit/Group	SETTINGS OPT	Options		
INDEX	Index	RETURN BACK	Back		
LANG/AUDIO	Lang/Audio	SOUND DUAL	Dual		
TV/RADIO	TV/Radio	SEARCH TV/R	TV/R		
SUBTITLE	Subtitle	AD SUBT	Subt		
SUBPAGE	Subpage	SHIFT + AD SUBT	Shift + Subt		
SIZE	Size	PICTURE FORMAT	Format		
HOLD	Hold	ECO 3D	3D		
STILL	Still	CLEAR EXIT	Exit		
PMODE	P.Mode	SHIFT + PICTURE FORMAT	Shift + Format		
S.MODE	S.Mode	SHIFT + SOUND DUAL	Shift + Dual		

