



Original	Replacement	Original	Replacement
 Power	 Power	 Input	 AV / Input / RDS
 1	 1	 P-	 CH- / Page-
 2	 2	 Home	 Menu / Home
 3	 3	 Guide	 Guide / EPG / -/--
 4	 4	 Info	 Info / Angle
 5	 5	 Up	 Up
 6	 6	 Left	 Left
 7	 7	 OK	 OK
 8	 8	 Right	 Right
 9	 9	 Back	 Back / Return
 Lang	 Audio / Lang I/II	 Down	 Down
 0	 0	 Exit	 Exit / Cancel / Clear
 TXT	 Text / Goto	 Netflix	 Shift + Red / Netflix /
 V+	 Vol+	 YouTube	 Shift + Yellow / YouTube /
 Mute	 Mute / Dimmer	 Prime Video	 Shift + Blue / Prime /
 P+	 CH+ / Page+	 Twitch	 Shift + Green / APP /
 V-	 Vol-	 Fav1	 Smart / List





Original	Replacement
 Fav2	 Display / Media
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 <<	 << / Tune-
 Stop	 Stop / Hold
 >>	 >> / Tune+
 Rec	 Rec / Rec Mode
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze

Original	Replacement

